



 
**Kingfisher  
Shower Tent**  
Model No. KC074-604

## PITCHING INSTRUCTIONS

### Your tent includes:


- 8 x pegs (5mm D X 178mm L)
- 4 x ropes
- 2 x black interlocking FIBREGLASS poles (1260mm x 11mm)
- 4 x black interlocking STEEL poles (1960mm x 16mm)

1. Select a dry, level site and clear the ground of any sharp objects. Remove the shower tent from its carry bag, untie fabric ties and unroll the tent. Unzip the door for easy access to the inside of the shower tent.

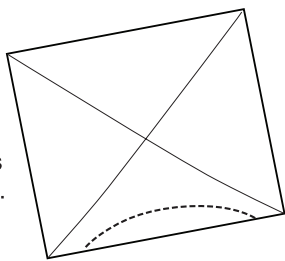

2. Assemble the black FIBREGLASS poles and the STEEL poles by interlocking the sections.

 
3. This will take two people to assemble. Take the first two steel poles and the first black FIBREGLASS pole. Insert each end of the black FIBREGLASS pole to the top ends of the STEEL poles.

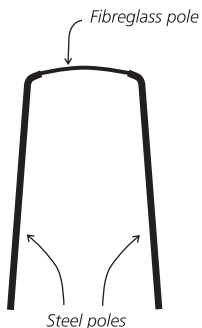

4. Create an arch in the fiberglass pole by pulling the two STEEL poles towards each other to

about an arms-length apart. Feed the arched frame into the shower tent while the shower tent is laying flat on the ground.

 
5. Locate the front right corner pin and insert the end of the pole onto the pin. Locate the back left pin, that is diagonally opposite and insert the end of the pole to the corner pin.

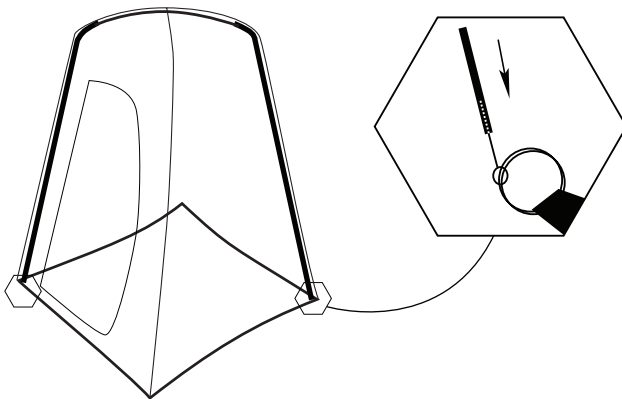

6. Connect the remaining fibreglass pole to the two remaining steel poles as in step 3. Connect the ends of the steel poles to the remaining pins at the base of the tent as in step 5.

7. Stand the tent to an upright position. Align the fly to the frame and wrap the hook and loop tabs to the corresponding poles to hold it in place. Secure the two crossing roof frame poles together with the fabric tie. Be careful not to over tension the frame.

 8. Peg out the corners of the shower tent, ensuring that the corners are pulled taut and square.
9. Finally, rope out the guy ropes and tune the fly so it remains taut and positioned correctly over the tent.

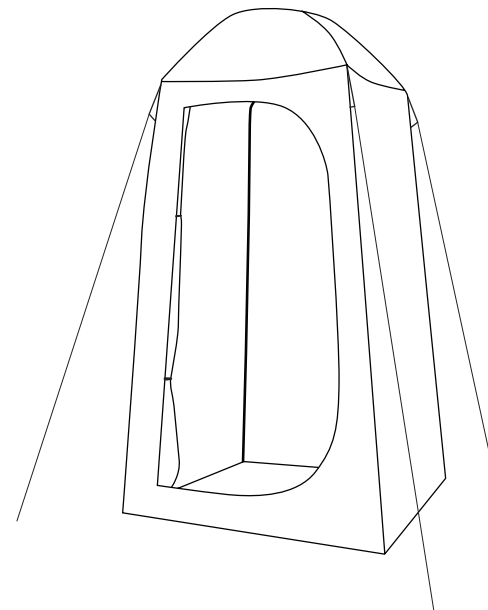

### REVERSE THE PROCEDURE TO LOWER THE SHOWER TENT

### PACKING INSTRUCTIONS

Layout the fly and fold to be the same width as the pole bag. Place the poles & pegs onto the fly and roll them inside so the fly is on the outside.

## SHOWER TENT CARE INSTRUCTIONS

PLEASE READ ALL OF THE SHOWER TENT CARE INFORMATION AND INSTRUCTIONS INCLUDED WITH THIS TENT BEFORE USING YOUR SHOWER TENT FOR THE FIRST TIME.

1. Before you use your new shower tent, fully unpack and pitch it at home. It is important to familiarise yourself with the set up procedure and the various features.
2. Select a site that is level, clear of any sharp objects, is dry, will drain well and is protected from wind and other elements.
3. Keep clear of overhead power lines and trees when setting up your shower tent.
4. For best and easiest results, enlist the help of at least one other person to assist in pitching the tent.
5. Keep all flame and heat sources away from this tent fabric. Do not use open flame or gas appliances in or near your shower tent.
6. Do not use aerosol sprays or any solvent based products in or around your tent as these could damage the fabric or special coatings. These products include but are not limited to: repellent spray, hair sprays, alcohol, detergents, fly spray, petrol, kerosene etc.
7. Please note, the warranty on this shower tent will be deemed void if the product is used for any purpose other than a **temporary, recreational** use shower tent.
8. Handle the tent poles carefully when locking poles together. If damage occurs to the pole ends, the poles may break when the pole is tensioned.
9. Especially in windy conditions, it is essential that you attach guy ropes and fasten them to the ground. We suggest you insert the pegs into the ground at a 45° angle towards the shower tent, not straight down. Please note, your shower tent will not be covered under warranty if wind damage occurs.
10. Use all of the guy ropes and pegs included to ensure your shower tent is secure and to prevent damage to both yourself and the shower tent. Check guy ropes/pegs daily.
11. To prevent condensation build up, keep ventilation vents open and air regularly with door open.
12. Ensure the fabric is never over stretched, especially as this may cause problems with zips.
13. To clean your shower tent, only ever use a soft sponge and warm water. DO NOT use excess force or other harsh cleaners to remove marks from tent.
14. After each use, rinse inside shower tent fabric to remove any soap residue. Ensure the tent is completely dry and clean before storing away and ensure to store it in a dry environment.

### IMPORTANT:

1. When securing a solar shower to the frame of Shower Tent, first ensure the frame is secured and fastened properly. The full solar shower weight should not exceed 20L. Any shower attached to the frame needs to be secured according to the solar shower instructions. No weight should be applied to hanging solar shower, as this will increase pressure on the frame. Children should be supervised.
2. Under certain conditions (cold weather, high humidity etc.) condensation may form on the inside of your tent fly. This does NOT mean your tent is leaking through the fabric. You can minimise condensation by opening door and airing out your tent during the day and by removing any wet clothing/towels etc.
3. Try to avoid pitching your tent under trees as tree limbs, falling leaves, sap, bird droppings or excess water dripping from the trees can cause damage to the tent fabric and its special coatings resulting in leakage or discolouration.

4. Only remove pegs by pulling on the peg itself. NEVER pull on the shower tent or the webbing loops to remove pegs as it could result in damage to the tent or personal injury.
5. DO NOT leave tent pitched for weeks at a time as extended exposure to the sun's ultraviolet rays can damage and/or cause it to discolour. Your tent will not be covered under warranty if you leave it up for many weeks at a time.
6. STORAGE:  
NEVER store your shower tent wet or dirty (even for short periods of time).  
NEVER store your pegs or poles inside your shower tent. Always use the separate bags they are supplied in.
7. You may want to insure your shower tent against loss or damage.

### WARRANTY INFORMATION

The warranty period for this tent is found on the packaging and full details are on the Kiwi Camping website - [www.kiwicamping.co.nz](http://www.kiwicamping.co.nz).

#### Key points:

The original purchaser of this product is offered a warranty if during this time period the product fails due to a fault in either materials or workmanship. Service under this warranty is available by returning the product, with your proof of purchase, to where it was purchased. If after inspection it is determined that the product is defective, we will repair or replace it (at our discretion) free of charge. This warranty does not cover misuse, damage caused by accident, storm or wind damage, mildew, neglect, UV degradation and fair wear and tear. Please note, the warranty on this tent will be deemed void if the product is used for any purpose other than a temporary shelter. If the claim is not deemed a warranty or is outside it's warranty period, we can repair the product at a nominal cost.



Distributed by: Aber Living, Hamilton, NZ  
[www.kiwicamping.co.nz](http://www.kiwicamping.co.nz)  
5105-07/20