




Savanna 3.5 Deluxe Shelter
Model No. KC074-172

PITCHING INSTRUCTIONS

Your tent includes:


- 34 x pegs
- 16 x ropes
- 8 x gold PRE-CURVED steel poles (19mm)
- 4 x gold STRAIGHT steel poles (19mm)
- 4 x STEEL 't' shaped joiners (19mm)
- 1 x STEEL quad knuckle (19mm)
- 2 x solid side walls

1. Select a dry, level site and clear the ground of any sharp objects. Remove the shelter from its carry bag, untie fabric ties and unroll the shelter. Spread the cover out in the desired location with the roof on top.

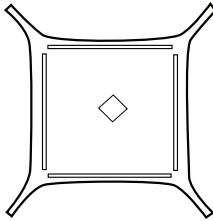


2. Carefully take the poles from the carry bag and assemble them into their groups (list above). The STEEL quad knuckle is attached to the shelter.

3. Connect the four STRAIGHT steel poles together and slide them through the pole sleeves in the roof from the outside to insert them into the STEEL quad knuckle in the centre of the roof. There is a small spring on the pole which locks into the slot under the knuckle. When all four poles are assembled and inserted, the centre of the shelter will be raised off the ground slightly. Attach the 't' shaped joiners, one to each pole.

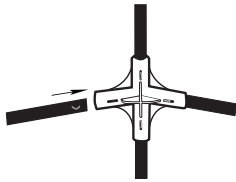


4. Unroll the webbing strap from the corners and connect to the side release buckles on the corresponding corner. This stops the corners from "splaying" out when the poles are inserted. Peg out the four corners checking the shelter is square.

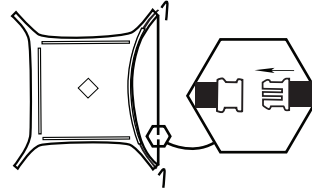

5. If you are wanting to attach the side walls, it is a good idea to attach them now. Take the weight off the zips when attaching the curtain by holding the curtain up as you zip.


6. *This will take two people to assemble.* Take one of the steel PRE-CURVED poles and going to the middle of any wall, attach the cross frame into the 't' shaped joiner. Holding this up, the other person then attaches either end to the pin and ring fitting on the corner of the shelter, making sure the curves are going in the right direction. Attach the speed clips going around the shelter wall.

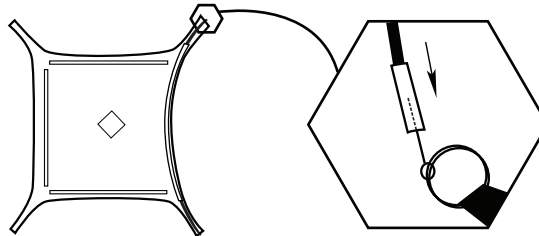

7. Going around the shelter, repeat for the other three walls.

8. Step back and check the shelter is square and sitting correctly. Peg out the remaining pegging points on the four corners, followed by the curtains.

9. *Fitting the guy ropes.* As you look at the side of the shelter, the PRE-CURVED steel poles are attached by speed hooks. Along each seam there are two speed clips together (these have orange webbing). This is where you attach the guy ropes. You should have 16 webbing guy straps and 16 clips with guy ropes attached. Take a webbing guy strap and attach around the PRE-CURVED steel pole between the 2 speed clips. Attach a guy clip to the two D's and peg out the rope. The speed clips stop the straps from sliding up or down. Repeat on all sides making sure the tension is even and the shelter is not pulled out of shape.
10. Remember this is a temporary shelter, not a structure, so always check it in windy conditions and do not leave it unattended.

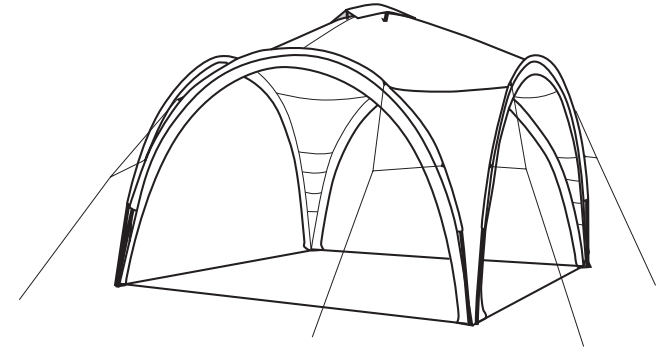

REVERSE THE PROCEDURE TO LOWER THE SHELTER

PACKING INSTRUCTIONS

Pack the poles and pegs into their bags. Fold the shelter from each side to the centre and in half again. Adjust to the length of the poles. Place the poles onto the floor and roll them inside so that the floor is on the outside. Store and pack the shelter in its bag.

TENT CARE INSTRUCTIONS

PLEASE READ ALL OF THE TENT CARE INFORMATION AND INSTRUCTIONS INCLUDED WITH THIS TENT BEFORE USING YOUR TENT FOR THE FIRST TIME.

1. Before you use your new tent, fully unpack and pitch it at home. It is important to familiarise yourself with the set up procedure and the various features.
2. Select a site that is level, clear of any sharp objects, is dry, will drain well if it rains and is protected from wind and other elements.
3. Keep clear of overhead power lines and trees when setting up your tent.
4. For best and easiest results, enlist the help of at least one other person to assist in pitching the tent.
5. Keep all flame and heat sources away from this tent fabric. Do not use open flame or gas appliances in or near your tent.
6. Do not use aerosol sprays or any solvent based products in or around your tent as these could damage the fabric or special coatings. These products include but are not limited to: repellent spray, hair sprays, alcohol, detergents, fly spray, petrol, kerosene etc.
7. Please note, the warranty on this tent will be deemed void if the product is used for any purpose other than a **temporary, recreational** use shelter.
8. Handle the tent poles carefully. When unfolding and folding the tent poles, do not allow the shock cord to pull and snap the ends together. This can damage the poles ends and result in breakage when the pole is tensioned.
9. Especially in windy conditions, it is essential that you attach guy ropes and fasten them to the ground. We suggest you insert the

pegs into the ground at a 45° angle towards the tent, not straight down. Please note, your tent will not be covered under warranty if wind damage occurs.

10. Use all of the guy ropes and pegs included to ensure your tent is secure and to prevent damage to both yourself and the tent. Check guy ropes/pegs daily.
11. Ensure there is an adequate gap between the fly and inner tent to enable ventilation and to prevent condensation build up.
12. Hold the flaps up, when closing the doors, to take pressure off the zips. Ensure that the tent fabric is never over stretched, especially as this may cause problems with the internal doors.
13. To clean your tent, only ever use a soft sponge and warm water. **DO NOT** use excess force or other harsh cleaners to remove marks from tent.
14. Ensure the tent is completely dry and clean before storing away and ensure to store it in a dry environment.

IMPORTANT:

1. Under certain conditions (cold weather, high humidity etc.) condensation may form on the inside of your tent fly. Condensation can occur for many reasons including vapour from your breath, perspiration, cooking nearby or wet clothing inside your tent. This does **NOT** mean your tent is leaking through the fabric. You can minimise condensation by opening windows and airing out your tent during the day and by removing any wet clothing/towels etc.
2. Try to avoid pitching your tent under trees as tree limbs, falling leaves, sap, bird droppings or excess water dripping from the trees can cause damage to the tent fabric and its special coatings resulting in leakage or discolouration.

3. Only remove the tent pegs by pulling on the peg itself. **NEVER** pull on the tent or the webbing loops to remove pegs as it could result in damage to the tent or personal injury.
4. **DO NOT** leave tent pitched for weeks at a time as extended exposure to the sun's ultraviolet rays can damage and/or cause it to discolour. Your tent will not be covered under warranty if you leave it up for many weeks at a time.
5. **STORAGE:**
NEVER store your tent wet or dirty (even for short periods of time).
NEVER store your pegs or poles inside your tent. Always use the separate bags they are supplied in.
6. You may want to insure your tent against loss or damage.

WARRANTY INFORMATION

The warranty period for this tent is found on the packaging and full details are on the Kiwi Camping website - www.kiwicamping.co.nz.

Key points:

The original purchaser of this product is offered a warranty if during this time period the product fails due to a fault in either materials or workmanship. Service under this warranty is available by returning the product, with your proof of purchase, to where it was purchased. If after inspection it is determined that the product is defective, we will repair or replace it (at our discretion) free of charge. This warranty does not cover misuse, damage caused by accident, storm or wind damage, mildew, neglect, UV degradation and fair wear and tear. Please note, the warranty on this tent will be deemed void if the product is used for any purpose other than a temporary shelter. If the claim is not deemed a warranty or is outside it's warranty period, we can repair the product at a nominal cost.



Distributed by: Aber, Hamilton, NZ
www.kiwicamping.co.nz

5224 05/20