

# Nouveau®

## Tower Fan



This manual applies to the following products  
SKU: 361435 / Model: TS32-07

# Nouveau.

## **Table of Contents**

Important Safety

Instructions Operation

Instruction Cleaning and Maintenance

Disposal of Appliances and Batteries

**Please read this manual carefully before use, and keep for further guidance**

# Nouveau.

## **Important Safety Instructions**

This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.

Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

Children shall not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

**TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT USE THIS FAN WITH ANY SOLID-STATE SPEED CONTROL DEVICE.**

**UNPLUG OR DISCONNECT THIS FAN FROM THE POWER SUPPLY BEFORE SERVICING.**

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- 1 The appliance is for household and indoor use only.
- 2 Before plugging in, check that the voltage on the fan rating label is the same as the mains supply.
- 3 To protect against electric shock, do not immerse any part of the fan in water or other liquid.
- 4 This fan is intended for use by competent adults only and children should always be supervised.
- 5 It is recommended to unplug the fan from the mains socket when not in use. Always remove from the mains socket before cleaning.
- 6 The supply cable cannot be replaced. If the cable is damaged the appliance should be scrapped.
- 7 Do not let the cable hang over the end of a table or work surface or touch hot surfaces.

# Nouveau.

- 8 Do not use the appliance for other than its intended use.
- 9 Don't use this fan in the immediate surroundings of a bath, a shower or a swimming pool. Never locate the fan where it may fall into the bathtub or other water container.
- 10 In case of malfunction, do not try to repair the fan yourself, it may result in a fire hazard or electric shock

## Assembly:

- 1 To attach the stand feet, set the fan gently on the head. Use a soft surface do not damage the cover.
- 2 Add the two halves of the stand feet together and set them on the housing.
- 3 Fix the stand feet with the provided screws on the housing. Make sure the cable is not clamped.
- 4 Fix the cable with the preassembled strain relief (Fig.1).
- 5 Turn the fan again on their stand feet and check the stability of the feet and fan.



Fig.1

**CAUTION:** The fan should always be switched off and not connected to the mains supply, during assembly.

## Operation Instruction

- Select a suitable location for the fan. Always choose a safe location in accordance with the Important Safeguards.
- When placing a fan on a table or shelf, always ensure that the power cord does not hang where it can accidentally be pulled causing the fan to fall.
- Connect the plug to a suitable power socket
- Speed control: Turn the knob to select the desired speed.
- Oscillation control: Turn the knob on 1 → 2 → 3 to select the oscillation.
- Timer: To preset the timer for the fan to operate at 40 minutes, 80 minutes, 120 minutes and the maximum time allow is 120 minutes turn the dial to the required time.



# Nouveau.

## Cleaning and Maintenance

- Cleaning and user maintenance shall not be made by children without supervision.
- Switch off and unplug from the power supply before assembling or disassembling and cleaning.
- Keep the air vents at the rear of the main body free from dust or fluff– use a vacuum cleaner to remove these when necessary. Do not probe any opening to remove fluff.
- Fan component parts should be cleaned using mild soap and a damp cloth or sponge. Do not allow any water or other liquid to enter the motor housing.
- Thoroughly remove soap film with clean water.

**CAUTION:** Do not use harsh detergents, chemical cleaners or solvents as they may damage the surface finish of the fan components.

## Environmentally friendly disposal



### You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre. The packaging material is recyclable. Dispose of the packaging in an environmentally friendly manner and make it available for the recyclable material collection-service.

MADE IN CHINA