

Nouveau®

Fan Desk 15 cm



This manual appliance to the following products
SKU: 381575 / Model: FJ-15A

Nouveau®

Table of Contents

Important Safety Instructions

Installation

Operations

- Speed Control

- Tilt Adjustable

Environmentally friendly disposal

Please read this manual carefully before use, and keep for further guidance

Nouveau®

Important Safety Instructions

This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.

Keep the appliance and its cord out of reach of children aged less than 8 years.

Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

Children shall not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT USE THIS FAN WITH ANY SOLID-STATE SPEED CONTROL DEVICE.

UNPLUG OR DISCONNECT THIS FAN FROM THE POWER SUPPLY BEFORE SERVICING.

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Use this fan only as described in this manual. Other use not recommended may cause fire, electric shock or injury to persons.
2. This product is intended for household use ONLY and not for industrial or outdoor use.
3. To protect against electric shock, do not place fan in window, immerse unit, plug or cord in water or spray with liquids.
4. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to defeat this safety feature.
5. Close supervision is necessary when any appliance is used by or near children. Press the OFF button and unplug the fan from the outlet when not in use, when
6. moving the fan from one location to another and before cleaning.
To disconnect the fan, first press the OFF button, grip the plug and pull it from
7. the wall outlet. Never pull by the cord.
Do not operate the fan in the presence of explosive and/or flammable fumes.

 
Nouveau®

8. Do not place the fan or any parts near an open flame, cooking or other heating appliance.
9. Do not operate the fan with a damaged cord or plug or if the product malfunctions, is dropped or damaged in any manner.
10. Avoid contact with moving fan parts.
11. The use of attachments not recommended by the manufacture may be hazardous.
12. hazardous.
13. Place the fan on a dry, level surface.
14. Do not hang or mount fan on a wall or ceiling.
15. Do not operate if the fan housing is removed or damaged.


INSTALLATION

Assembling the appliance:

Unscrew the adjusting screw by turning it counterclockwise until it completely clears the nut.

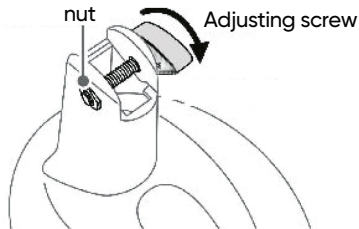

 
Insert the swivel arm under the motor unit into the slot in the base.

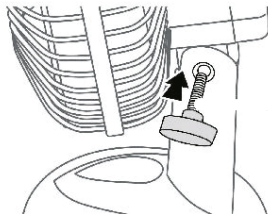


Nouveau

Align the holes of both parts.

 Insert the adjusting screw into the holes of both parts (1 and 2).

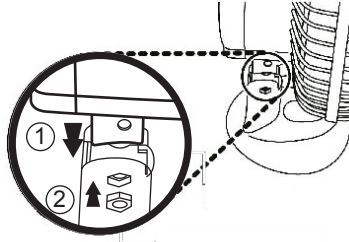


 Tighten the adjusting screw again by turning it clockwise.

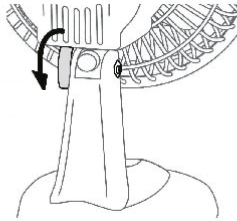

OPERATION OF THE PRODUCT

 1. Front grille
2. Blade
3. Base
4. Handle
5. Rear grille
6. 0/1/2 Speed Selector
7. Motor
8. Screw
9. Nut
10. Power cable
11. Plug

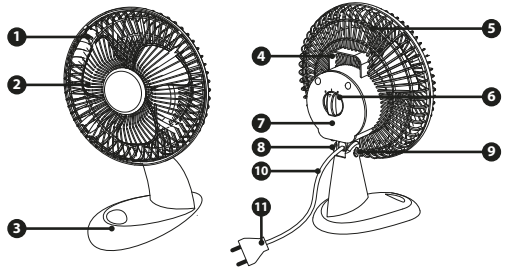

Nouveau®

1. On / Off and Speed Control

The ON/Off and Speed is controlled by the Turning Switch, which is located on the rear motor housing indicated in the above diagram.

- 0-The Fan is switched Off
- 1-The Fan operates at the lowest speed
- 2-The Fan operates at the highest speed

2. Tilt Adjustment

Switch off the fan. Slightly loosen the Adjusting Screw by turning it anti-clockwise. Adjust the fan to the desired angle and then tighten the Adjusting Screw by turning it clockwise.

Environmentally friendly disposal



You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre. The packaging material is recyclable. Dispose of the packaging in an environmentally friendly manner and make it available for the recyclable material collection-service.

MADE IN CHINA