


PANTRY CABINET CORNER UNIT

Assembly Instructions


Suitable for Tall Cabinet
CP1040-IMP

Art. 732.25.844

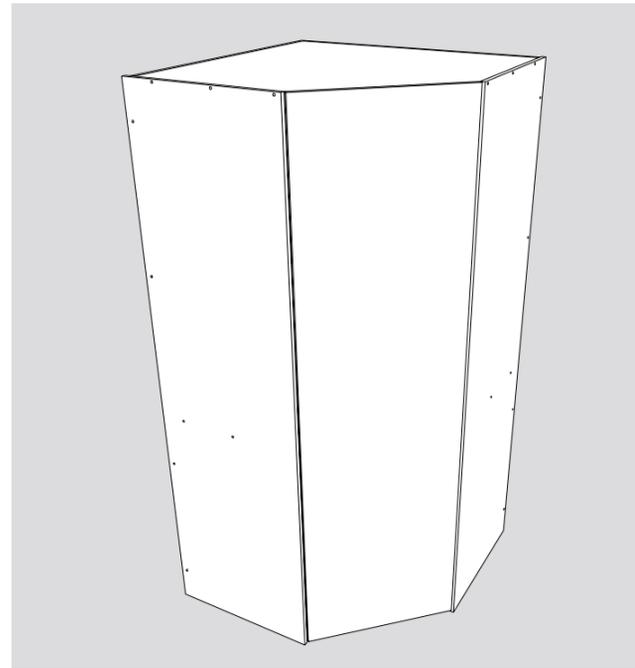


Handy Note: Please read the instructions carefully before you start and make sure to identify the parts you need for each step. When assembling it is best to do on a soft surface to prevent damage.


Cabinet Panels included.

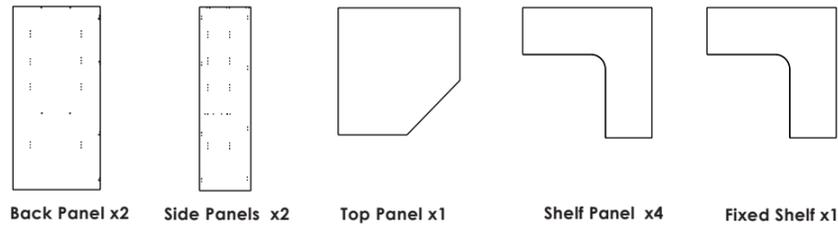

HÄFELE Hardware included.

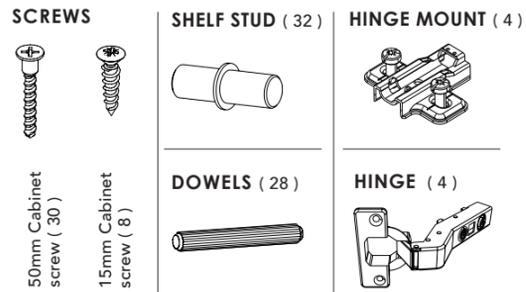

Required Tools.

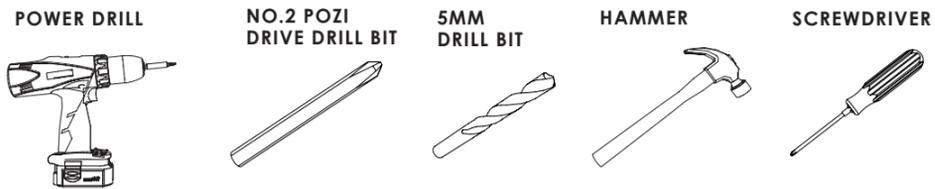


Handy Tools.



Manufactured in New Zealand for: Mitre 10 New Zealand Limited.


1. Inserting Dowels into Side Panels

- While laying the side and back panels down flat, insert the dowels into the holes marked with arrows in the diagram.

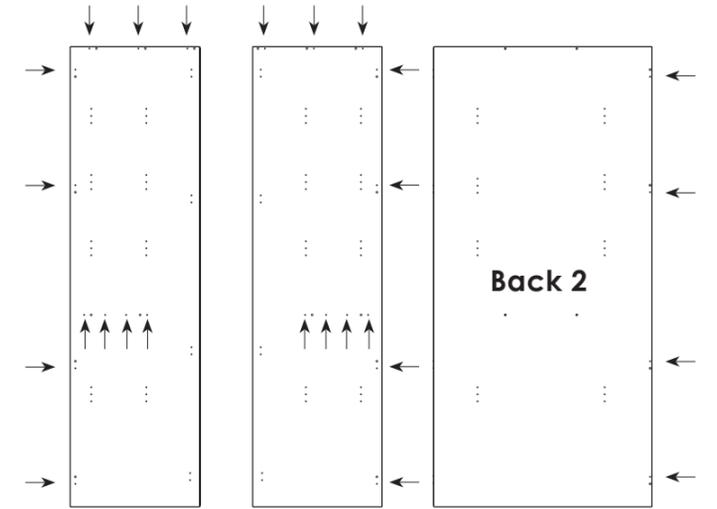


2. Fixing Back Panels together.

- Fix back 1 to back 2 as shown, with 50mm cabinet screws.

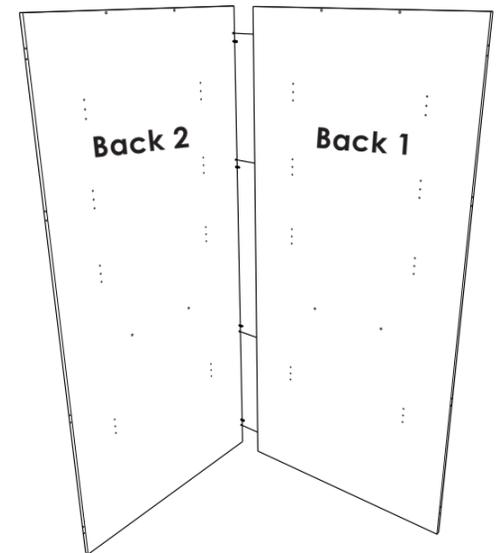



3. Fixing Top and Fixed Shelf Panel to Backs.

- Screw fix the top and fixed shelf panels to back 1 and back 2 as shown, with 50mm Cabinet Screws.

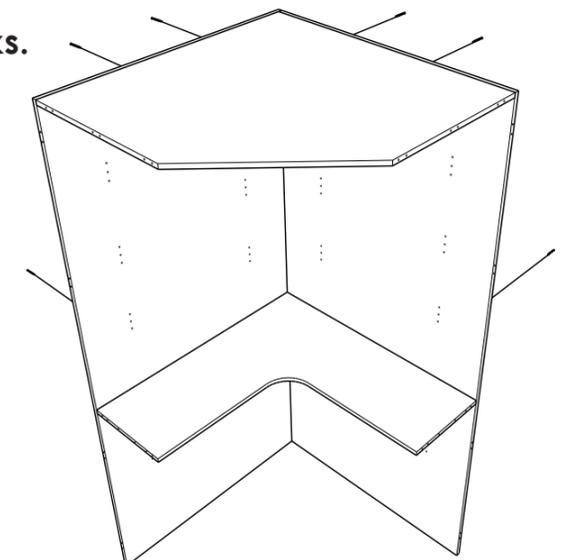


4. Fixing the Hinge Mounts.

- Fix the hinge mounts onto the desired side panel as shown.
Note: The door can be hinged right or left as per your requirement by choosing the desired side panel.

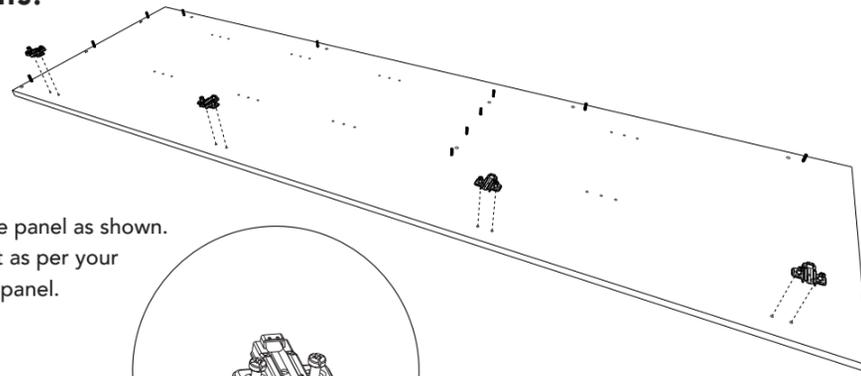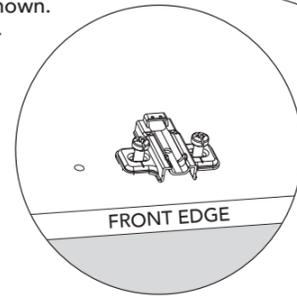


5. Fixing The Side Panels to the Back & Top.

- Fix the side panels onto the top, fixed shelf and back panels using the 50mm cabinet screws.

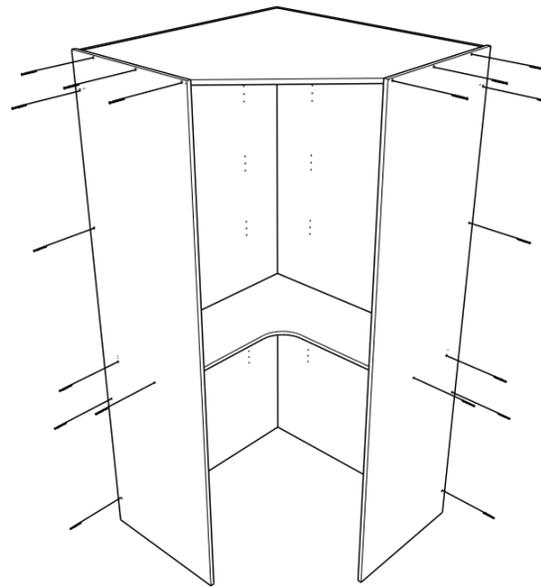


6. Fixing Hinge Mounts.

- Screw fix the hinges using 15mm screws, as shown.
- Clip doors onto the unit. See hinge installation for further details.



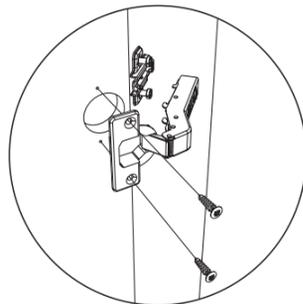


Note: Door Fronts sold separately.

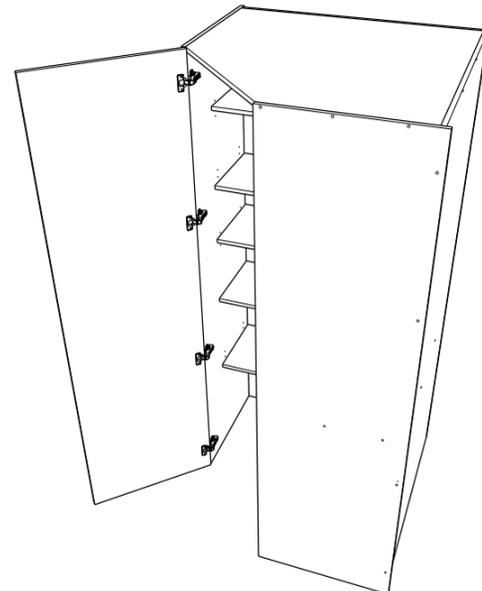


7. Installing Adjustable Shelves.

- Before installing adjustable shelves ensure they are stacked on top of the fixed shelves, while the shelf pins are fixed in the desired shelf holes. Then twist and angle the adjustable shelves to place them onto the correct shelf pins.

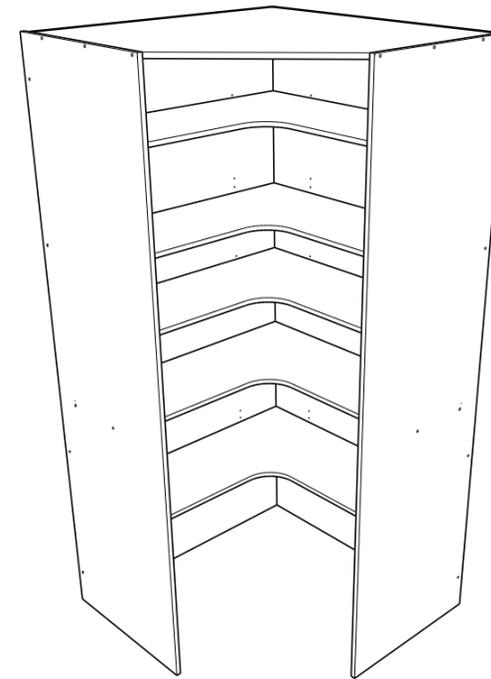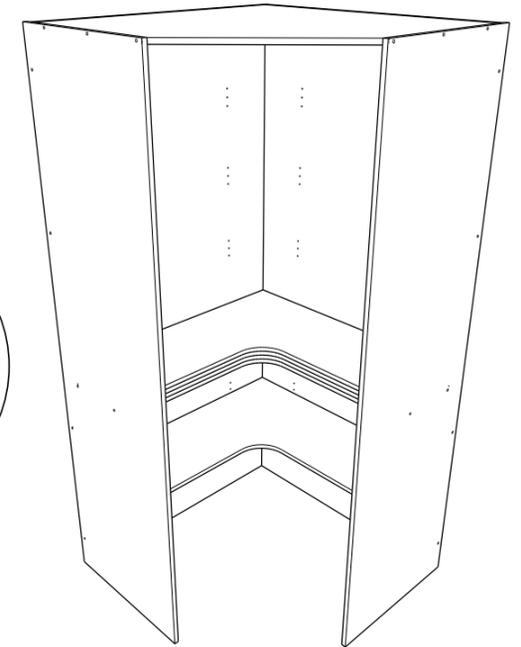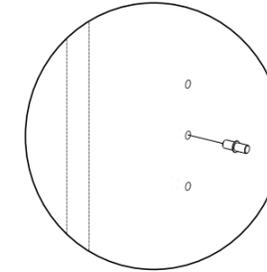


8. Hinge Installation.

- Hook the hinge into the front of the mount.

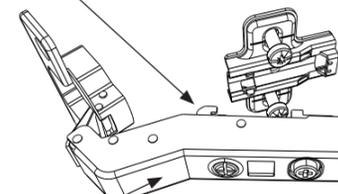


- Push the back down onto the hinge mount until you hear a click.

- Push this button to release the hinge from the mount.

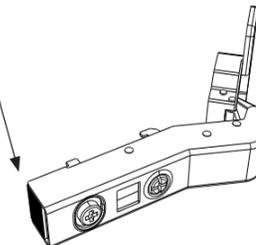

- Use these screws to adjust door up / down.

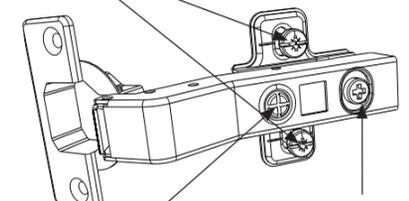

- Use these screws to adjust door in/out.

- Use this screw to adjust door right / left.