


ARTIFICIAL VERTICAL GARDEN & HEDGE PANELS INSTALLATION

Our vertical garden and hedge panels consist of highly realistic and dense plastic plants and leaves attached to a 1m x 1 m flexible plastic grid like backing frame. Made from a colourful array of lifelike foliage with a superb realism, the faux vertical garden hedge panels have been designed to meet the high expectations of designers, architects, landscapers and home-decorators.

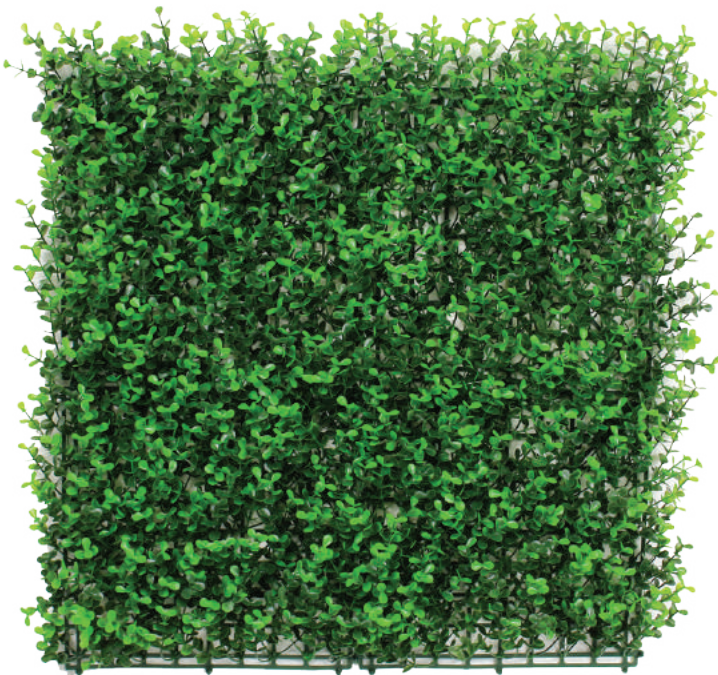

FEATURES:

- Handmade and comes with a unique and varying plant layout, but the plant stems can unclip from the backing frame to be rearranged in any configuration you like. You can easily clip multiple panels together to create a stunning vertical garden of any size.
- Lightweight (3-6kg) UV stabilised for outdoor use and includes a 1-year manufacturer's warranty against faded or cracked leaves.
- Each piece of foliage is highly detailed with lifelike colours and textures, while the varying sizes and styles of the artificial plants add a true sense of depth and realism to the green wall.


The vertical garden hedge panels is a fantastic way to bring instant character to any wall or fence, with absolutely no maintenance required. These panels are the highest quality available, and the UV stabilising ingredients are embedded into the plants during the manufacturing process ensuring maximum longevity in NZ harsh conditions.




INSTALLATION INSTRUCTIONS:

The panels are designed to be DIY friendly and can be quickly and easily attached to a variety of walls or surfaces.


1. The panels easily clip together, but we recommend installing one single panel at a time and clipping them together as you go.

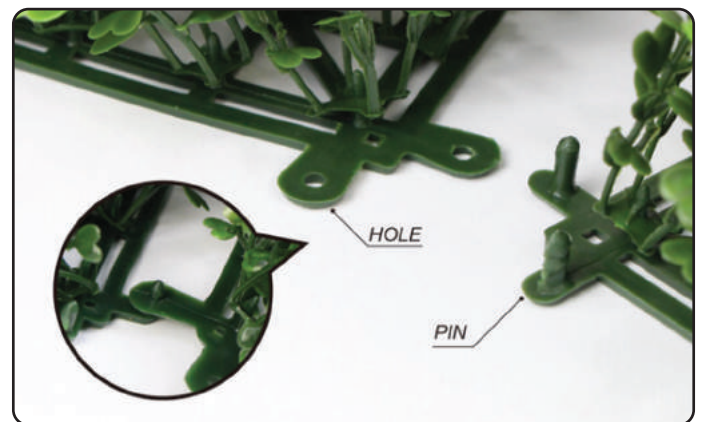

2. For all models, please pay attention to the splicing direction. Place all the leave upwards and then splice.

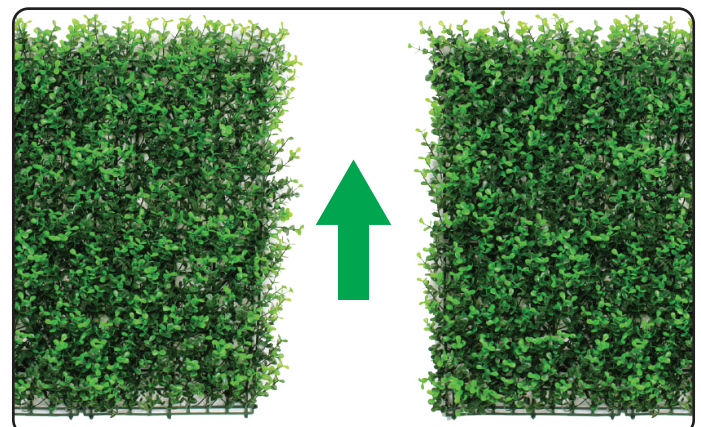

3. It is recommended to measure your space or design to calculate the number of panels required. You can start customizing them to fit the space or need you to have. You can create almost any shape or size you need by snipping the artificial hedge panels and assembling them however you see fit.

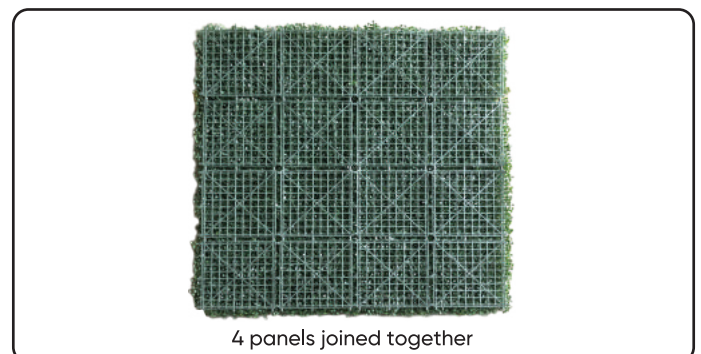

4. In some cases, you may need to trim or reshape your hedge panels to the right shape or size for your project. To do this, you will simply need to use a pair of sharp scissors to snip and cut the artificial hedge panels into the exact measurements you need.

INSTALLATIONS TYPES:

A: Timber fence/Plaster wall:

Our preferred method, and the easiest way to install our vertical garden and hedge panels onto timber, is to simply staple the panels directly into place.

You will need: 1 Staple Gun + Staples



- Step 1:** Hold the panel up (make sure it is straight) and move the foliage back to expose the backing mesh.
- Step 2:** Staple either side of the plastic mesh up the top on either end.
- Step 3:** Staple either side of the plastic mesh down the bottom on either end.
- Step 4:** Continue placing more staples across the panel. We recommend 2 staples across the top and 2 staples every 25cm in a similar way – to make a minimum of 8 staples per 0.5m x 0.5m panel.




B: Wire Fence:

Attaching your vertical garden, hedge panels or bespoke panels to wire fences is the easiest process of all. And it's a great way of hiding that ugly fence or for providing more privacy.

You will need: Cable ties




- Step 1:** Hold the panel against the wire fence in the position that you require. Adjust to where it looks best, and/or hides the fence for a seamless look.
- Step 2:** Once happy with its position, simply loop a cable tie through both the panel backing grid, and the fence wire – and pull tight.
- Step 3:** Secure the remainder of the panel at regular intervals with more cable ties to ensure it remains perfectly in place and won't flap around. We recommend a minimum of around 18 cable ties for each panel.
- Step 4:** Making sure each cable tie is as tight as possible, snip off any excess for a neat finish at the back. Alternatively, if you prefer, you can also use small pieces of wire, to twist around and secure.

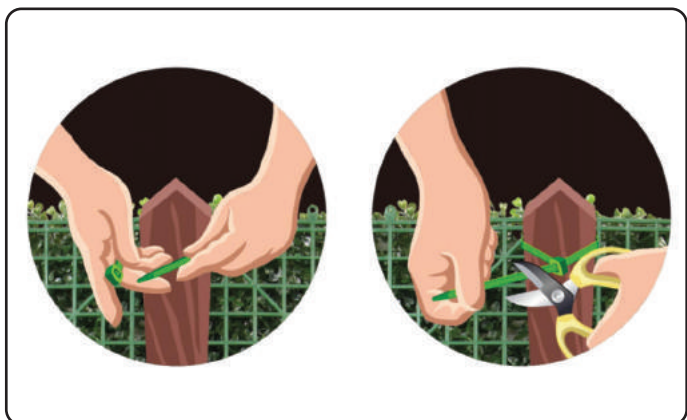


C: Concrete/Brick Wall:

While attaching our artificial plant panels onto brick or concrete may appear to be hard, it is actually very straight forward.

You will need: Drill, 5mm masonry drill bit, 5mm nylon plugs, washers

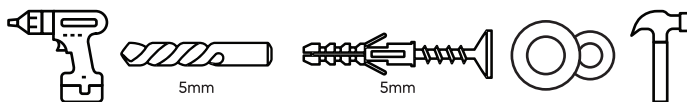

- Step 1:** Hold the panel in place on the wall and use a marker to mark out the position of each screw hole on the wall.
- Step 2:** Remove the panel from position and use a masonry drill to drill into the marked positions
- Step 3:** You will then need to insert plastic masonry anchors into the holes.
- Step 4:** Insert screws through the plastic panel and into the plastic masonry anchors to fix the panel to the wall.

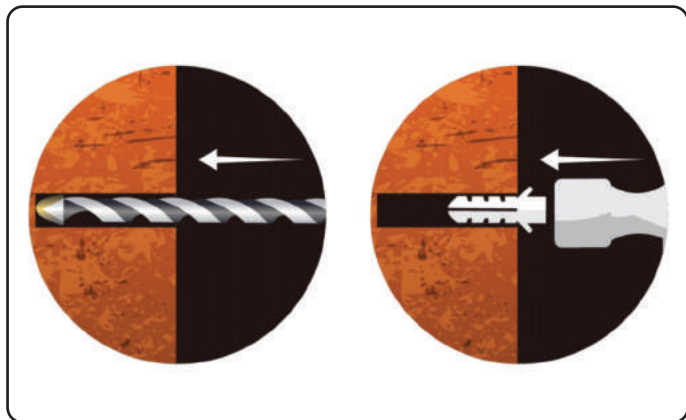

INSTALLATION TIPS:

- The first panel(s) you should install should be the top (highest) row of panels. You can install 1 panel at a time and clip them together as you go.
- Before installing the top row of panels, use a spirit level to mark a straight line across the length of the area that your vertical garden will cover. When installing the row of panels, make sure they are in line with the marked line.
- After the top row of panels is installed, you can easily clip the next row of panels on to the panels above and let them hang freely before fixing them to the wall. This makes installation very quick and easy.

No matter what type of wall, fence or area you'd like to cover or enhance, chances are, there's a way to attach our beautiful looking designer garden panels with ease. If you've got an odd-shaped area or a tricky surface, or simply need some extra assistance, feel free to get in touch with our friendly, expert team for advice.



The overall installation is completed.