



MONSTER TRUCK

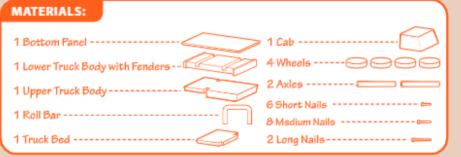



Locate the bottom panel, lower truck body with fenders and the upper truck body. Use 4 x middle nails to attach as shown.

(Match the predrilled holes)

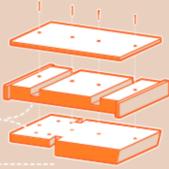

Locate the roll bar and attach it to the truck bed using 2 x short nails as shown.



Attach the truck bed to the body assembly from step ① using 4 x middle nails as shown.



Using 2 x long nails, attach the cab to the truck body.



Attach 1 x wheel to each axle using 1 x short nail as shown.



Slide the axles through the truck assembly and attach the second wheel using 1 x short nail as shown.



CAUTION: Kit contains components with functional sharp points. Adult supervision required. Please dispose of any components if they become damaged after assembly. Use safety goggles at all times. Small parts: not suitable for children under three years.