



1 Mark door

Fold template over edge of door, centering on height line.
Mark centres of holes A and B depending on backset required

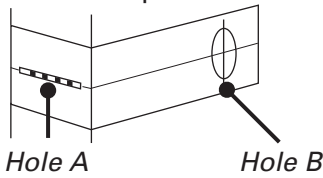


2 Drill two holes

Drill hole A 25mm x 100mm deep.
Hole B (depending on backset) 25mm through door. Cut out for latch front and install latch unit

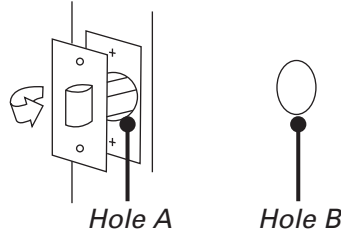

3 Install strike

Close door to jamb and mark position for striker plate.
Cut out striker plate and install

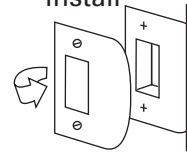

Mortice Latch

Square door edge Bevel door edge


Place template on high edge of bevel door

Mark centre of door
Hole A

Drill 25mm hole at centre of the door edge

For 70mm backset fold here
For 60mm backset fold here


Height line

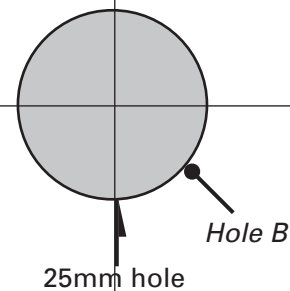

Installation Template


1 Mark door

Fold template over edge of door, centering on height line.
Mark centres of holes A and B depending on backset required

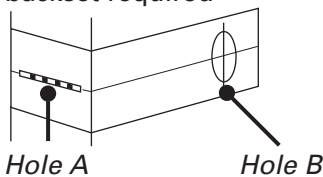


2 Drill two holes

Drill hole A 25mm x 100mm deep.
Hole B (depending on backset) 25mm through door. Cut out for latch front and install latch unit

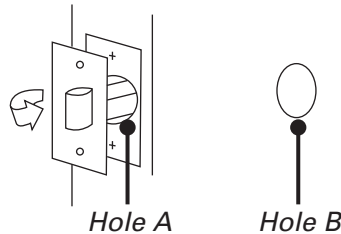

3 Install strike

Close door to jamb and mark position for striker plate.
Cut out striker plate and install

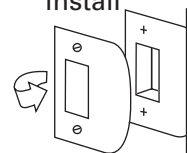

Mortice Latch

Square door edge Bevel door edge


Place template on high edge of bevel door

Mark centre of door
Hole A

Drill 25mm hole at centre of the door edge

For 70mm backset fold here
For 60mm backset fold here

Height line

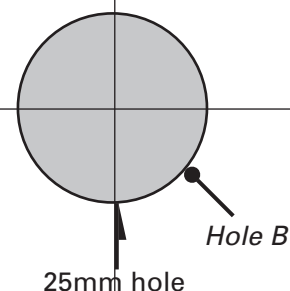

Installation Template