



1 Mark door

Fold template over edge of door, centering on height line. Mark centres of holes A and B depending on backset required

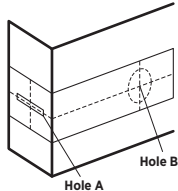

2 Drill two holes

Drill a 22mm diameter hole to a depth of 3mm to act as a counter bore in door edge. Then drill a 19mm diameter hole to a depth of 95mm in the centre of counter bore hole to accommodate bolt body. Drill a 19mm hole at right angles to the bolt hole, 60 or 70mm in from the door edge depending on backset required. **N.B. If emergency release is not required DO NOT drill spindle hole right through door**

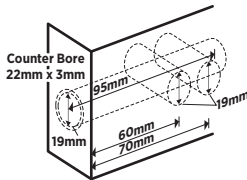


Note: Drill one of these holes only, depending on the backset required.

3 Install bolt

Insert bolt body into the door **ensuring that the two bearing retainer holes are at the top.**

Locate spindle and fix faceplate with screws provided

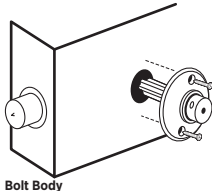


Bolt Body

4 Install knob

If emergency release is required glue escutcheon to other side of door over spindle hole. In cases of emergency, bolt can be released by inserting screw driver through escutcheon hole and turning.


Screw on door knob to spindle using the 4G x 3/4 posi screw with Phillips screw driver

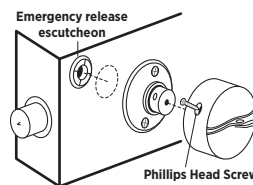

Phillips Head Screw

5 Fit keeper


Close door with bolt withdrawn. Turn knob so that raised marker spike marks door frame for keeper positioning. Drill 3mm x 22mm hole to act as counter bore. Then drill 19mm diameter hole to a depth of 19mm to accommodate keeper body. Fit keeper with squared sides in position. Screw into place using 5G x 3/4 posi screw provided

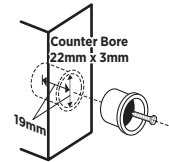

Privacy Bolt


1 Mark door

Fold template over edge of door, centering on height line. Mark centres of holes A and B depending on backset required

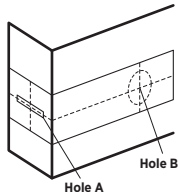

2 Drill two holes

Drill a 22mm diameter hole to a depth of 3mm to act as a counter bore in door edge. Then drill a 19mm diameter hole to a depth of 95mm in the centre of counter bore hole to accommodate bolt body. Drill a 19mm hole at right angles to the bolt hole, 60 or 70mm in from the door edge depending on backset required. **N.B. If emergency release is not required DO NOT drill spindle hole right through door**

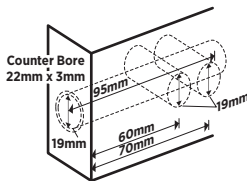


Note: Drill one of these holes only, depending on the backset required.

3 Install bolt

Insert bolt body into the door **ensuring that the two bearing retainer holes are at the top.**

Locate spindle and fix faceplate with screws provided

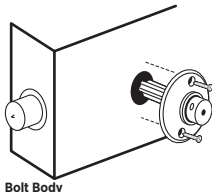


Bolt Body

4 Install knob

If emergency release is required glue escutcheon to other side of door over spindle hole. In cases of emergency, bolt can be released by inserting screw driver through escutcheon hole and turning.


Screw on door knob to spindle using the 4G x 3/4 posi screw with Phillips screw driver

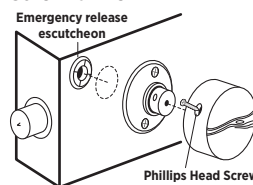

Phillips Head Screw

5 Fit keeper


Close door with bolt withdrawn. Turn knob so that raised marker spike marks door frame for keeper positioning. Drill 3mm x 22mm hole to act as counter bore. Then drill 19mm diameter hole to a depth of 19mm to accommodate keeper body. Fit keeper with squared sides in position. Screw into place using 5G x 3/4 posi screw provided

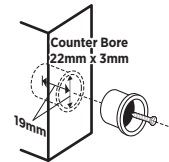

Privacy Bolt


1 Mark door

Fold template over edge of door, centering on height line. Mark centres of holes A and B depending on backset required

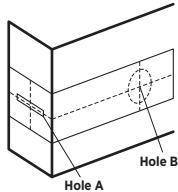

2 Drill two holes

Drill a 22mm diameter hole to a depth of 3mm to act as a counter bore in door edge. Then drill a 19mm diameter hole to a depth of 95mm in the centre of counter bore hole to accommodate bolt body. Drill a 19mm hole at right angles to the bolt hole, 60 or 70mm in from the door edge depending on backset required. **N.B. If emergency release is not required DO NOT drill spindle hole right through door**

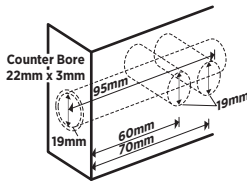


Note: Drill one of these holes only, depending on the backset required.

3 Install bolt

Insert bolt body into the door **ensuring that the two bearing retainer holes are at the top.**

Locate spindle and fix faceplate with screws provided

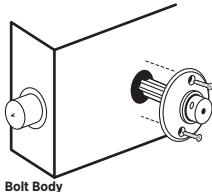


Bolt Body

4 Install knob

If emergency release is required glue escutcheon to other side of door over spindle hole. In cases of emergency, bolt can be released by inserting screw driver through escutcheon hole and turning.


Screw on door knob to spindle using the 4G x 3/4 posi screw with Phillips screw driver

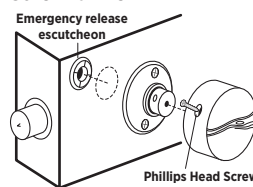

Phillips Head Screw

5 Fit keeper

Close door with bolt withdrawn. Turn knob so that raised marker spike marks door frame for keeper positioning. Drill 3mm x 22mm hole to act as counter bore. Then drill 19mm diameter hole to a depth of 19mm to accommodate keeper body. Fit keeper with squared sides in position. Screw into place using 5G x 3/4 posi screw provided

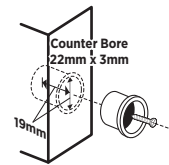

Privacy Bolt

