



**3M**17048
command.com**To Apply**


1
CLEAN surface with isopropyl rubbing alcohol, wipe gently, let dry. Do not use household cleaners. **SEPARATE** strips.

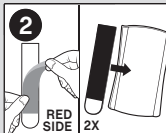

2
REMOVE RED liners. With the nail at the **BOTTOM** of the hanger, **PRESS** adhesive to back of sticky nail. Repeat with second strip.

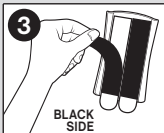


3
REMOVE BLACK liners.

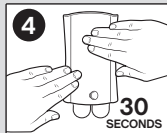


4
Press sticky nail **FIRMLY** for 30 seconds. **Wait 1 hour** before use.

TO APPLY STABILIZER STRIPS:


1
CLEAN surface with isopropyl rubbing alcohol, wipe gently, let dry. Do not use household cleaners. **SEPARATE** strips.

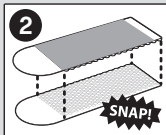

2
Press fasteners together until they snap.

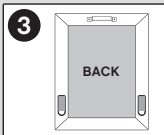

3
Remove one red liner. Position one set of strips on the lower portion of frame. Press firmly. Repeat with other set of strips. Remove remaining red liners.

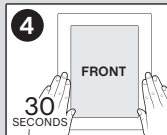


4
Hang frame using sticky nail, straighten frame as desired. Press firmly on each set of strips for 30 seconds.

To Remove

1
NEVER pull strip towards you.



2
STRAIGHT DOWN
Hold sticky nail gently to prevent sticky nail from snapping fingers. **DO NOT** press sticky nail against wall.

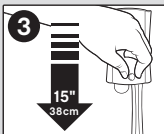

3
STRETCH STRAIGHT DOWN ALONG WALL AT LEAST 15 INCHES (38 cm) until strip releases from wall.

***HOLDS MOST FRAMES up to 18" X 24" (45.7 cm x 60.9 cm) or MAXIMUM 8 lbs (3.6 kg).**

IMPORTANT: Failure to follow instructions carefully may cause damage!
SAVE INSTRUCTIONS for damage-free removal or visit command.com

For questions, ideas and special offers go to command.com

CAUTION:

DO NOT use with wallpaper. May not adhere well to vinyl surfaces. DO NOT use for antiques, heirlooms, or other valuable or irreplaceable items. DO NOT hang items over beds.

NOTE:

Apply to surfaces **above 50°F (10°C)**. Adhesive could lose adhesion above 105°F (40°C).

Wait a minimum of 7 days after painting to hang pictures. Hanger can be reused with Command™ Large Strips.

The following statements only apply to products distributed in the USA.

Limited Warranty:

This 3M product will be free from defects in material and manufacture. If this product is defective, your exclusive remedy shall be, at 3M's option, replacement of the product or refund of the purchase price.

Limitation of Liability:

3M will not be liable for any loss or damage arising from this product, whether direct, indirect, special, incidental or consequential.